

BLEED VALVE

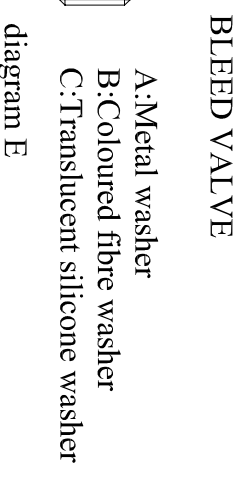


diagram C

D: Dead end      Pipes centres: 100 mm

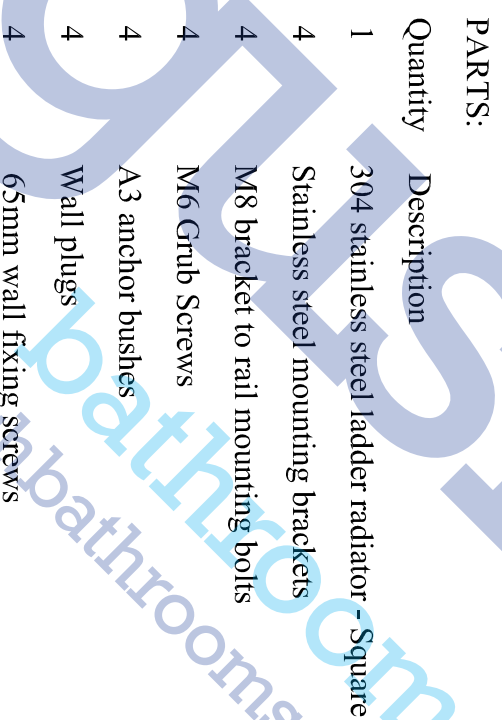


diagram D

1). Secure the mounting bracket to the radiator M8 nuts using the M8 mounting bolts. (diagram C)

- 2).Position the radiator onto the wall and mark out the fixing positions.(diagram A)
- 3).Drill 4xØ9 holes into the wall.(diagram B)
- 4).Insert the wall plugs and using the 65mm wall screws secure the A3 anchor bush to the wall.(diagram B)
- 5).Place the radiator and its mounting brackets onto the A3 anchor bushes and secure into position using the M6 grub screws.(diagram D)

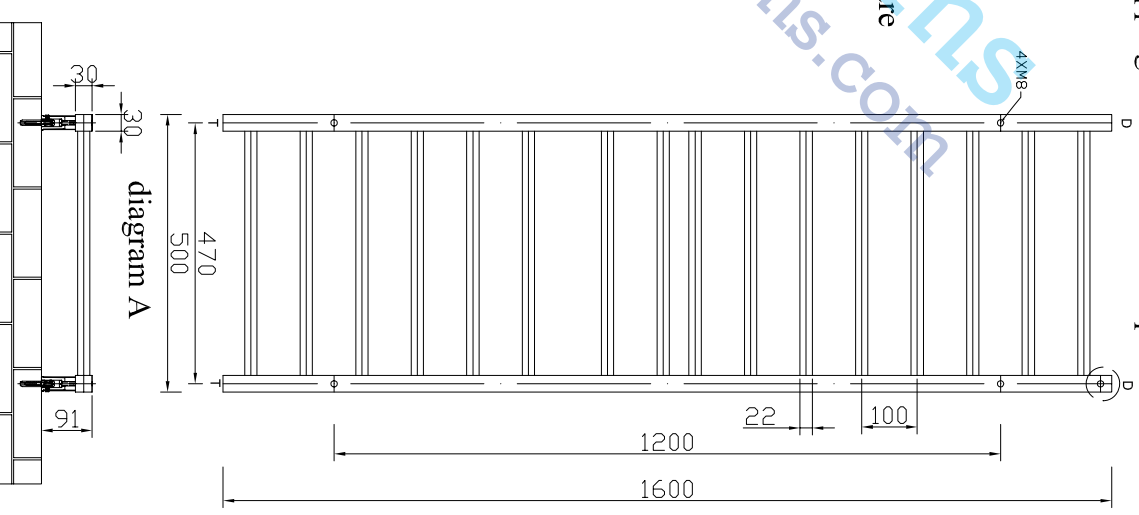


diagram A