

Stainless steel radiator straight 1600 x 500

BLEED VALVE

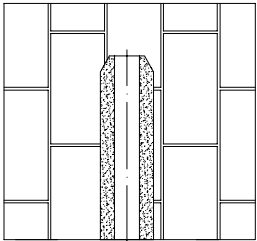


diagram B

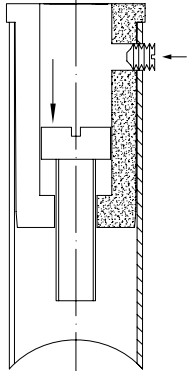


diagram C

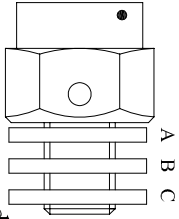


diagram E

- A: Metal washer
B: Coloured fibre washer
C: Translucent silicone washer

T: 1/2" Tapping

D: Dead end

Pipes centres: 50 mm

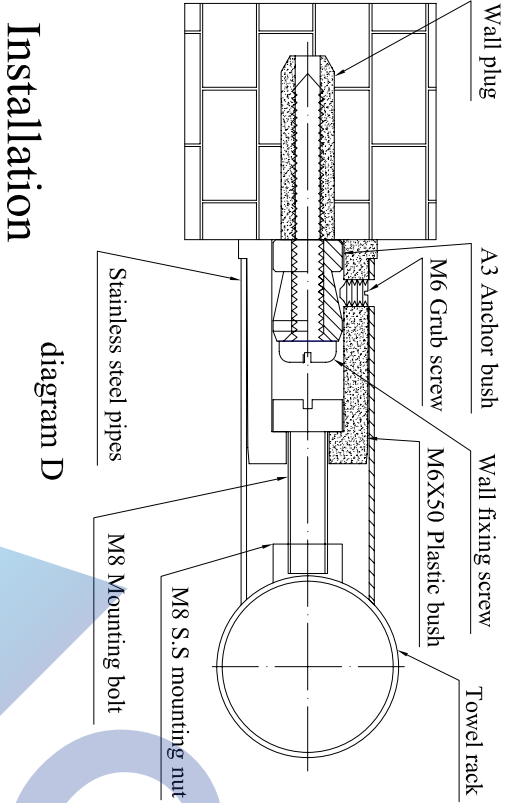


diagram D

PARTS:	Quantity	Description
A3 Anchor bush	1	304 stainless steel ladder radiator
M6 Grub screw	4	Stainless steel mounting brackets
Wall fixing screw	4	M8 bracket to rail mounting bolts
M6X50 Plastic bush	4	M6 Grub Screws
Towel rack	4	A3 anchor bushes
M8 S.S mounting nut	4	Wall plugs
M8 Mounting bolt	4	65mm wall fixing screws

- 1) Secure the mounting bracket to the radiator M8 nuts using the M8 mounting bolts.(diagram C)
- 2) Position the radiator onto the wall and mark out the fixing positions.(diagram A)
- 3) Drill 4xØ9 holes into the wall.(diagram B)
- 4) Insert the wall plugs and using the 65mm wall screws secure the A3 anchor bush to the wall.(diagram B)
- 5) Place the radiator and its mounting brackets onto the A3 anchor bushes and secure into position using the M6 grub screws.(diagram D)
- 6) CAUTION: Please ensure that the bleed valve washer are placed in the correct order as indicated in.(diagram E). Do not over tighten.

Installation

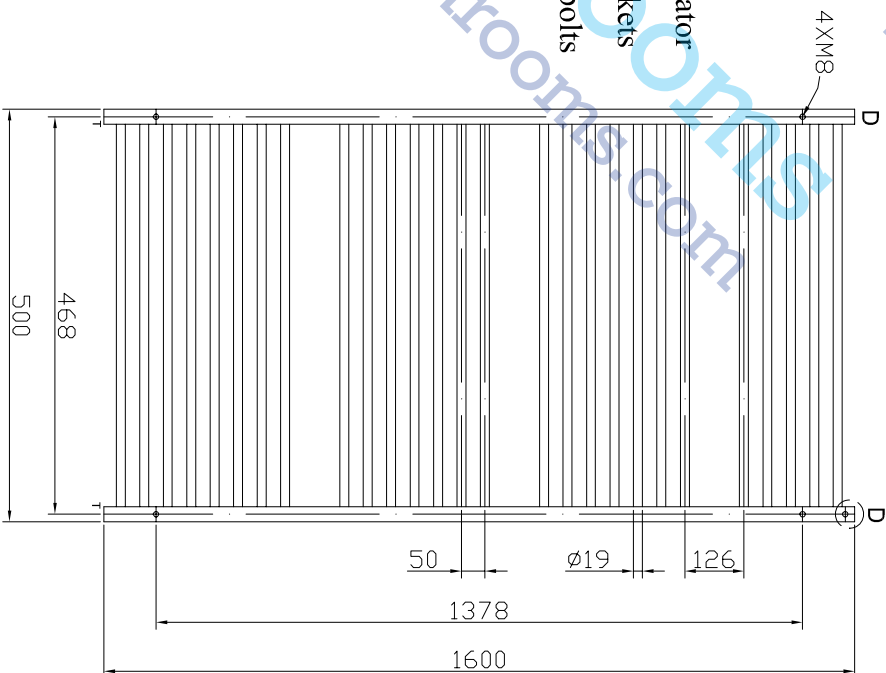


diagram A

- Model: TWSSST 165