
## Stainless steel radiator straight 700 x 500

## BLEED VALVE A:Metal washer

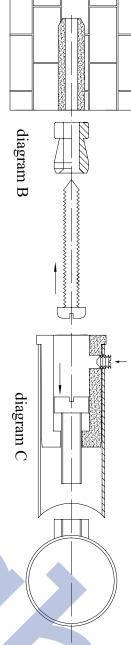

Wall plug

A3 Anchor bush M6 Grub screw

M6X50 Plastic bush Wall fixing screw

Towel rack

PARTS:


Quantity


Description

304 stainless steel ladder radiator

M8 bracket to rail mounting bolts

Stainless steel mounting brackets





C:Translucent silicone washer


B:Coloured fibre washer

T:1/2" Tapping


diagram E

D:Dead end

Pipes centres: 50 mm

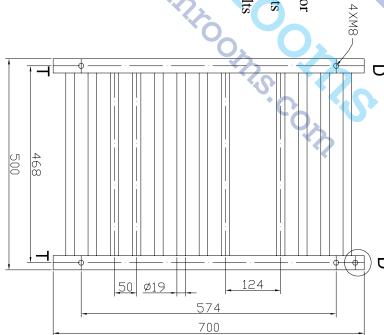





Model:TWSSST 075

## Installation

Stainless steel pipes

M8 Mounting bolt

A3 anchor bushes

Wall plugs

65mm wall fixing screws

M6 Grub Screws

M8 S.S mounting nut

diagram D

1). Secure the mounting bracket to the radiator M8 nuts using the M8 mounting

bolts.(diagram C)

- 2). Position the radiator onto the wall and mark out the fixing positions. (diagram A)
- 3).Drill 4xØ9 holes into the wall.(diagram B)
- 4).Insert the wall plugs and using the 65mm wall screws secure the A3 anchor bush to the

wall.(diagram B)

- 5). Place the radiator and its mounting brackets onto the A3 anchor bushes and secure into position using the M6 grub screws.(diagram D)
- indicated in.(diagram E).Do not over tighten 6).CAUTION:Please ensure that the bleed valve washer are placed in the correct order as