
Stainless steel radiator straight 1200 x 400

BLEED VALVE

ВС diagram E A:Metal washer

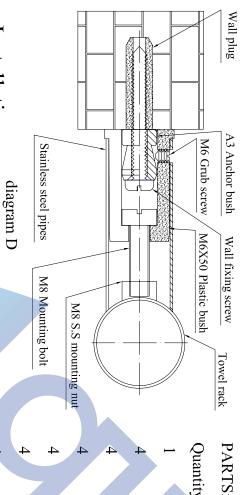

Quantity Description

diagram B

diagram C

T:1/2" Tapping

D:Dead end

Pipes centres: 50 mm

C:Translucent silicone washer B:Coloured fibre washer

304 stainless steel ladder radiator

Stainless steel mounting brackets

M8 bracket to rail mounting bolts

M6 Grub Screws

A3 anchor bushes

65mm wall fixing screws Wall plugs

1). Secure the mounting bracket to the radiator M8 nuts using the M8 mounting

Installation

- bolts.(diagram C)
- 2). Position the radiator onto the wall and mark out the fixing positions. (diagram A)
- 3).Drill 4xØ9 holes into the wall.(diagram B)
- 4).Insert the wall plugs and using the 65mm wall screws secure the A3 anchor bush to the

wall.(diagram B)

- 5). Place the radiator and its mounting brackets onto the A3 anchor bushes and secure into position using the M6 grub screws.(diagram D)
- indicated in.(diagram E).Do not over tighten 6).CAUTION:Please ensure that the bleed valve washer are placed in the correct order as

